 
 



BALL CHUTE FEATURE

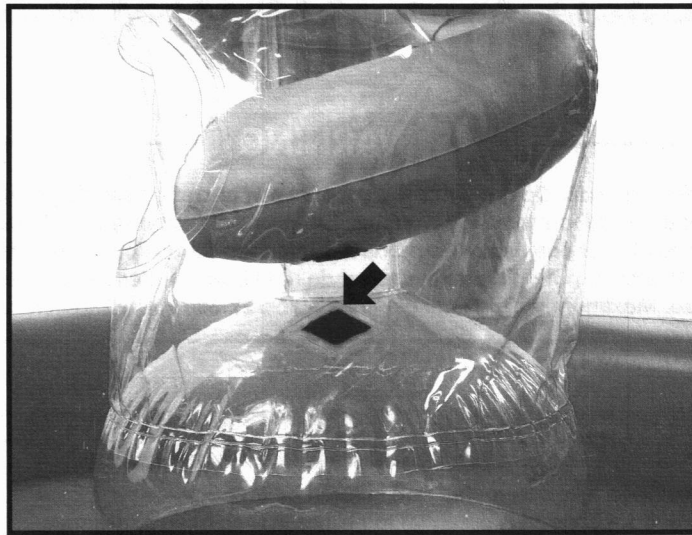

Attach swirl tube onto the floor base as shown.

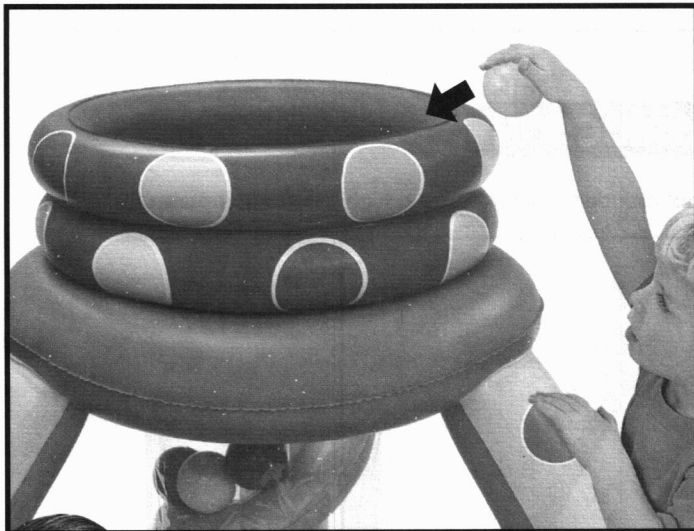

 Place a ball into the opening near the top of the Ball Chute Chamber.

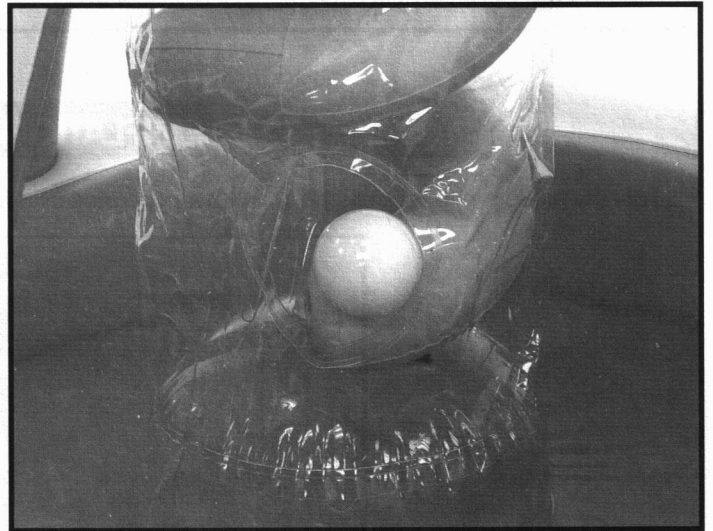

Watch the ball twirl down the chamber.

REPAIR PATCH INSTRUCTION

1. Thoroughly clean damaged surface and allow to dry for a minimum of 10 minutes.
2. Cut a piece of patch material to cover the hole in the toy.
3. Remove and throw away the paper backing.
4. Press patch firmly over the hole.
5. Do not inflate for at least 20 minutes.



Bubble Gum Playland™

⚠ WARNING


Do not use near stairways or swimming pools. Do not place this product on concrete, asphalt, packed earth or other hard surface, as serious injury can result. Do not use outdoors in windy weather. This product must only be inflated by an adult. For safe usage, do not allow more than 2 children to play at one time. This product is intended for use by children from Ages 3 and older. This toy is not intended to be used in water. This toy is not a floatation device, do not fill with water. Parental supervision is required. Do not leave child unattended while in use. Maximum weight limit per child 50lbs/22.5kg. Limit 2 Children.

IMPORTANT SAFETY INFORMATION


- Do not use this product until it has been fully assembled and inflated by an adult.
- As with any inflatable product, adult supervision is essential to ensure that children play safely.
- Be sure children are dressed appropriately to avoid potential hazards while playing with this product. Children should not wear loose clothing.
- Do not use this product in a manner that is unintended.

INFLATION INSTRUCTION

- Inflate the product with a foot pump or a battery operated air pump (not included). DO NOT use a high pressure air pump.

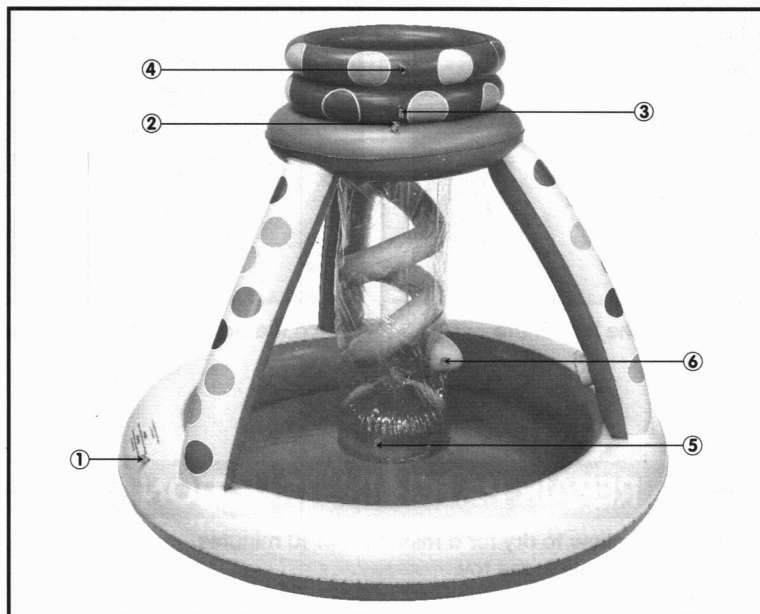

There are 6 air chambers in this product. Each chamber needs to be filled with air. We recommend that you inflate the chambers in the order in which they are numbered in the photo.

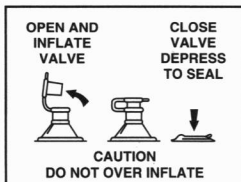

To inflate each air chamber:

- Lift the plug on the valve.
- Pump air through the valve.
- Fit the plug into the valve.
- Press the valve into the chamber.

IMPORTANT! Do not over-inflate or under-inflate any of the chambers.

CARE AND MAINTENANCE

- To clean, use a mild detergent and water solution and a clean cloth. Rinse clean with water to remove soap residue.
- Keep this product out of direct sunlight and away from direct heat sources.
- Keep the sound module dry and avoid contact with any liquid substances, as they could cause damage to this product's electronics.

FCC NOTE (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.


NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

CONSUMER INFORMATION


In the event that you have any questions, comments or problems, please call our toll free number 1-888-MOOSE-88 (1-888-666-7388) Monday through Friday 10:00 a.m. - 4:00 p.m. E.S.T. (Valid only in the U.S.A.) Please also visit our website at www.moosemountaintoys.com. This does not affect your statutory

© 2008 Moose Mountain Toymakers Limited.
ALL RIGHTS RESERVED. HONG KONG.
© 2008 Moose Mountain Marketing, Inc.
ALL RIGHTS RESERVED.
PARSIPPANY, N.J. 07054 U.S.A.
MADE IN CHINA.


In the interest of better quality and value, we are constantly improving and updating our products. Consequently, pictures on this package may sometimes differ from the product enclosed.

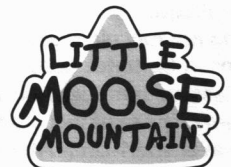


MODULE PLACEMENT

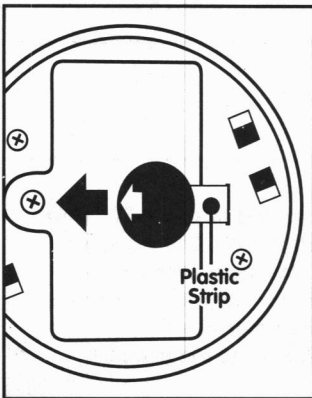 

 
Remove plastic strip to activate motion sensor and sounds.

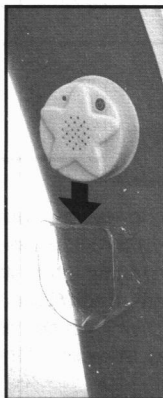

 Place module in clear PVC pouch, as shown.

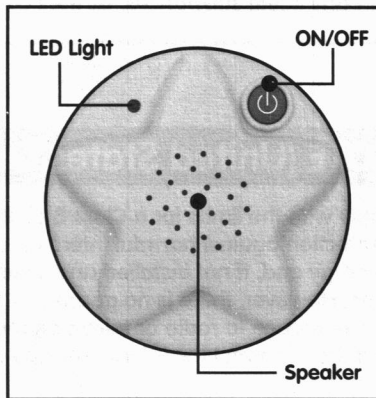

Press power button to turn the module on or off.

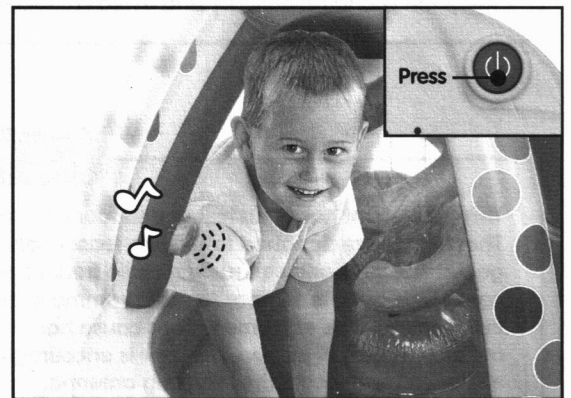

To activate the module, gently shake the module or press the ON/OFF button, as shown.

NOTE: The module will automatically go into sleep mode if not shaken for three minutes. To activate the module, gently shake the module or press the button.

BATTERY INSTRUCTION

- Locate the battery compartment on the back of the sound module.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two "AAA" batteries, as indicated inside the battery compartment.

Hint: We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- If sounds from this module become faint, stop or if the sound repeats or skips, it is time for an adult to replace the batteries.

Battery Tips

- In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries according to the correct polarity (+,-) as indicated on the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Please Note - For best performance, we recommend replacing the batteries that came with this toy with three, new "AAA" (LR3) alkaline batteries.

Static electricity may cause this product to malfunction. If this should happen, simply remove the batteries and re-install them.

- Keep these instructions for future reference as they contain important information. Remove all packaging before giving to children.
- The batteries included in this toy are intended for in-store demonstration purposes only.
- Under an environment with electrostatic discharge this product may malfunction. The user should turn the power switch Off and On to reset the Module.

BATTERY REPLACEMENT

