

Remote Commander RM-VZ320

©2010 Sony Corporation Printed in China http://www.sony.net/

English

For the Customers in the U.S.A.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules...

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Setting Up the RM-VZ320

The RM-VZ320 is preset at the factory to operate Sony brand A/V devices set to any of the Device Select buttons (see the table below).

Table with 3 columns: Devices, Button, Factory setting*. Rows include TV, IPTV, Cable set top box, Satellite receiver, Digital-to-analog converter, DVD player, DVD recorder, Blu-ray Disc/HD-DVD player, DVR, PVR, Video accessory, CD player, Cassette deck, DVD Home Theater, Amplifier, Receiver, AMP.

* The five-digit code is the preset manufacturer's code.

 
Note: Only a TV can be assigned to the TV Device Select button. You can assign any device to the other Device Select buttons.

Operating Instructions Manual de instrucciones (parte posterior)



Installing the batteries

Slide open the battery compartment and insert two size AA (R6) dry batteries (not supplied).

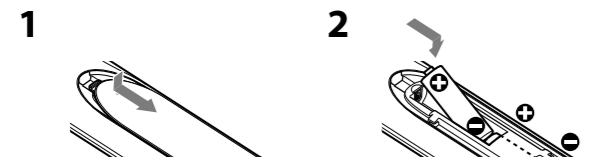

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Battery life

- Under normal conditions, size AA (LR6) alkaline batteries will last up to one year.
If the RM-VZ320 does not operate properly, the batteries might be drained.
Replace both batteries with new ones.

Specifications

Table with 2 columns: Specification, Value. Includes Operating distance, Power requirements, Battery life, Dimensions, Mass.

Troubleshooting

- If you have problems setting up or using the RM-VZ320:
Carefully perform the setup procedure of "Startup Guide."
Aim the RM-VZ320 directly at the device.

For the customers in the U.S.A.

Customer Support Information: After you have read through this manual, if you still cannot get the RM-VZ320 to work properly, call the Sony Customer Support Helpline at 1-800-822-2217.

Startup Guide

This guide shows you how to set up and use the RM-VZ320 to operate your devices. If your Sony device has already been preset, see "Operate the device."

Set the manufacturer's code


Example: To set up a Philips TV

1 Find the manufacturer's code in the supplied "Manufacturer's Code List."


Table with 4 columns: Brand, Code No., Brand, Code No. Lists codes for various brands like Philips, JVC, Kenwood, etc.

If your device is not listed, try the Search function (see "Searching for the correct code").

2 Press and hold SET for more than 3 seconds.

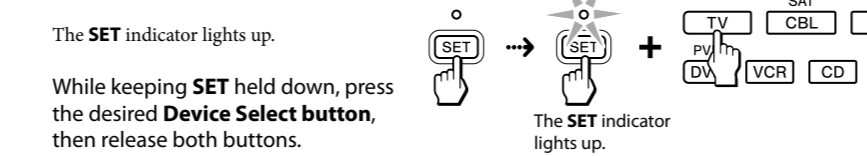


3 Enter the manufacturer's code (01454).

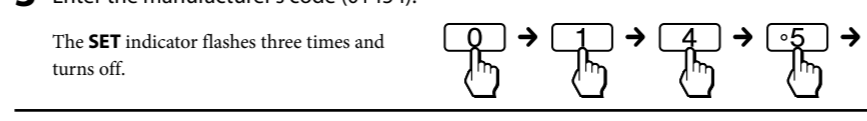


Operate the device

1 Aim the RM-VZ320 directly at the device.

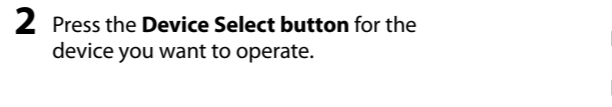

3 Press POWER to turn on the device.

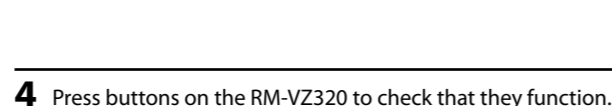

4 Press buttons on the RM-VZ320 to check that they function.

- If the RM-VZ320 does not seem to be working...:
Check that you have set the correct manufacturer's code.
Try repeating the setup procedure using another manufacturer's code.

Searching for the correct code

You can set the manufacturer's code using the Search function.

- 1 Power on the device with its power switch.
2 Aim the RM-VZ320 at the device you want to set.
3 Press and hold SET for more than 3 seconds.
4 Enter 9-2-2 using the number buttons.

Checking the manufacturer's code you have set

- 1 Press and hold SET for more than 3 seconds.
2 Enter 9-3-3 using the number buttons.
3 Press SET.
4 When the SET indicator starts flashing, count the number of flashes.

Clearing the automatic power-on control (Sony devices only)

The Device Select buttons are preset to automatically turn on the device when pressed.

Restoring the factory settings

- 1 Press and hold SET for more than 3 seconds.
2 Enter 9-0-0 using the number buttons.
3 Press SET.

- Notes on using the RM-VZ320:
The RM-VZ320 will not perform functions that the device is not designed for.
The function of the buttons varies depending on settings/operating modes.

Adjusting the volume

Press VOL +/- to control the volume. Press MUTE to mute the sound.


To change the factory preset of the volume control: Example: When you want to hear the sound of your DVD player...

- 1 Press and hold SET for more than 3 seconds.
2 Enter 9-5-5 using the number buttons.
3 Press AMP.
7 Check if the code number works correctly.

Assigning a channel to each number button

- Channel selecting procedures can be programmed to the number buttons (0-9) for each device mode.
Example: To assign a channel to number button 9 in CBL mode.
1 Press and hold SET for more than 3 seconds.

Remote Button Descriptions

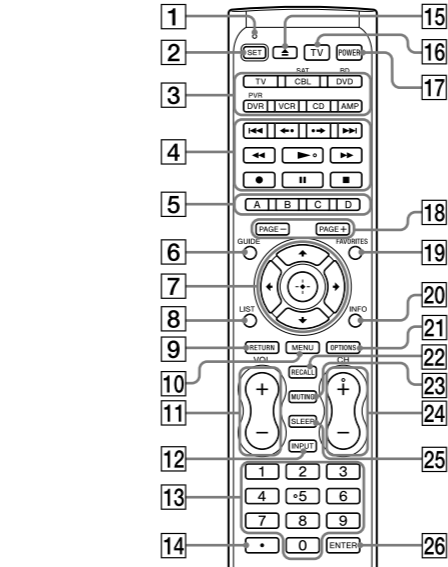

- General:
1) 2) SET: Press to set up the RM-VZ320.
3) Device Select buttons: Press to select the device to operate.
7) VOL +/-: Turns the volume up/down.
16) TV: Turns the TV on and off.

TV

- 4) VIDEO 1 input
5) VIDEO 2 input
6) HDMI input
7) RGB input
8) (PIP INPUT) Changes the input mode.

VCR

- 4) Rewinds.
5) Plays.
6) Fast forwards.
7) Records.
8) Pauses.
9) Stops.

Cable set top box/IPTV

- 4) Proceeds to the previous chapter/track.
5) Briefly replays the scene (Flash -).
6) Briefly fast forwards the scene (Flash +).

Satellite receiver

- 4) Proceeds to the previous location.
5) Briefly replays the scene (Flash -).
6) Briefly fast forwards the scene (Flash +).

DVD player/recorder

- 4) Proceeds to the previous chapter/track.
5) Briefly replays the scene (Flash -).
6) Briefly fast forwards the scene (Flash +).

Blu-ray Disc/HD-DVD player

- 4) Proceeds to the previous chapter/track.
5) Briefly replays the scene (Flash -).
6) Briefly fast forwards the scene (Flash +).

DVD Home Theater

- 4) Proceeds to the previous chapter/track.
5) Briefly replays the scene (Flash -).
6) Briefly fast forwards the scene (Flash +).

CD player

- 4) Selects the previous track.
5) Selects the next track.
6) Fast reverses.

Cassette deck

- 4) Rewinds.
5) Plays.
6) Fast forwards.

Amplifier/receiver

- 4) Fast reverses.
5) Plays.
6) Fast forwards.

