

IMPORTANT SAFETY INFORMATION BATTERY WARNINGS AND PROPER USE

WARNING: Battery acid leakage can cause personal injury and cause damage to the product, and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes into contact with leaked battery acid. Leaking batteries may make "popping" sounds. Dispose according to Local, State and Federal Laws.

TO AVOID BATTERY PROBLEMS:

Do not mix old and new batteries.
Do not use rechargeable batteries.
Never mix alkaline, standard (Carbon-Zinc) and rechargeable (Nickel-Cadmium) batteries.
Only batteries of the same or equivalent type as recommended are to be used.
Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
Different types of batteries or new and used batteries are not to be mixed.
Non-rechargeable batteries are not to be recharged.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- < Reorient or relocate the receiving antenna.
- < Increase the separation between the equipment and receiver.
- < Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- < Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

JAKKS Pacific® Battery, Solar or Electrically-Operated Product 90 DAY LIMITED WARRANTY

Thanks for purchasing a great JAKKS Pacific® product! Please immediately register your product online at www.jakks.com/warranty. Registration is not required for the effectiveness of this limited warranty.

IMPORTANT NOTICE TO CONSUMER:

This 90 DAY LIMITED WARRANTY applies to the original product purchaser, provided the product: 1) was purchased from an authorized JAKKS™ distributor/dealer/retailer; and 2) is returned at your expense, postage pre-paid and insured, along with the original dated sales receipt to the address noted below. Please save a copy of your original sales receipt, as the original receipt will not be returned to you. If you return the product to us without the original dated sales receipt, this warranty coverage will not apply. If the product is determined by JAKKS to be defective and returned to JAKKS within the 90 day warranty period, we will (at our option) repair or replace it. Return shipment to you may take up to 6 weeks, depending upon your location. If your product is repaired or replaced, it will be warranted for the longer of the original warranty or for 30 days after warranty service.

SCOPE OF LIMITED WARRANTY: The product is warranted to be: a) tested and inspected before shipment, and b) free of defects in material and workmanship for 90 days from date of purchase. If a covered defect occurs within the warranty period, then at our sole option, we will repair or replace the product or provide you with another product of equal value.

WHAT IS NOT COVERED BY LIMITED WARRANTY: THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN MODIFIED OR REPAIRED BY USER OR OTHERS OR IF IT HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, IMMERSION IN WATER, NEGLECT, ABUSE, MISUSE, BATTERY LEAKAGE, IMPROPER BATTERY INSTALLATION, UNAUTHORIZED SERVICE, LOSS OF PARTS, WEATHER, ACTS OF GOD, ANY ACTION OR CAUSE ON WHICH CONSTITUTES A DEVIATION FROM THE OPERATING INSTRUCTIONS, OR ANY OTHER CAUSES NOT ARISING OUT OF DEFECTS IN WORKMANSHIP OR MATERIALS. EXCLUSIONS FROM LIMITED WARRANTY IS EXCLUSIVE OF DEFECTS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. THIS WARRANTY IS EXCLUSIVE OF AND IMPLIES WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARISING FROM POSSESSION, USE, OR MAINTENANCE OF THIS PRODUCT ARE EXCLUDED BOTH FOR PROPERTY DAMAGE AND PERSONAL INJURY TO THE EXTENT LEGALLY PERMITTED. ADDITIONAL LEGAL RIGHTS: This warranty provides specific legal rights. You may have other or different rights in your state or country.

QUESTIONS OR COMMENTS: If you experience product difficulties or have questions or comments, you may contact our Consumer Relations department as follows:

Phone: 877-875-2557 (toll-free, North America only) or 909-594-7771 x560 (Monday-Friday, 7:30AM-4:30PM Pacific/GMT -8)

Mailing: JAKKS Consumer Relations, 21749 Baker Parkway, Walnut, California USA 91789. Email: consumers@jakks.com
WHEN WRITING TO US: Please include: 1) product name; 2) item number; 3) purchase date; 4) description of the problem being experienced; and 5) your name, address and phone number. Additionally, if eligible under the warranty and so advised by JAKKS Consumer Relations, also include the defective product and the ORIGINAL dated sales receipt evidencing product purchase. Please retain a copy of your receipt.

080309

TM & © 2010 JAKKS Pacific, Inc. Malibu, CA 90265 USA.
JAKKS Pacific UK Ltd, Ascot, Berkshire SL5 9ED U.K.
MADE IN CHINA

Contents may vary in style, color, shape and decoration from images shown on package or in advertising. Questions or comments? www.jakks.com, consumers@jakks.com, 1-877-875-2557 in North America, or 01344 638909 in the United Kingdom.
Pats. US 6261 180, 6302796, 5741185. Additional Pat. Pending.

www.jakks.com



JOIN THE NETWORK

Play games and gather intel on other SpyNet™ gadgets at:

SPYNET.HQ.COM



SPYNET LASER STRIKE™

 
WARNING: ADULT SUPERVISION REQUIRED. See enclosed safety instructions.

6 AAA's Required
Not Included




LASER DUELING SYSTEM DIAGRAM

2 x Blasters

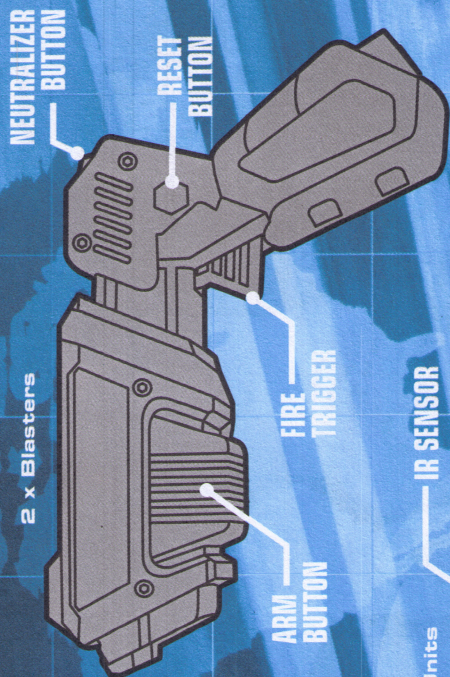

2 x Target Units

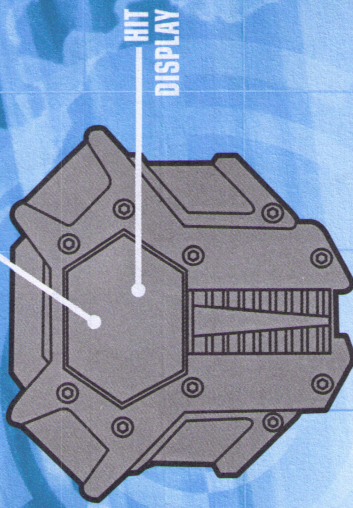 

STARTING THE GAME

THIS PRODUCT DOES NOT CONTAIN A REAL LASER DEVICE. INFRARED BEAM CANNOT BE SEEN. FIRING DISTANCE AND ACCURACY MAY BE AFFECTED BY WEATHER AND LIGHTING CONDITIONS.

Be responsible. NEVER point your blaster at anyone not playing the SpyNet Laser Strike™ game.

POWER ON

- Turn your Blaster and Target Unit on by sliding the on/off switch (located on the back of the Target Unit) to the "on" position (Fig. 2).

- Locate the RESET button (R) on the left side of the Blaster (Fig. 3).

NOTE: RESET ALL BLASTERS BEFORE STARTING A GAME!

- To begin a game or reset an opponent's Blaster, aim your Blaster at that opponent's Target Unit and press the Reset button on your Blaster.

RELOAD

- In order to fire, you must reload your Blaster. To reload, press the Arm Button under the Blaster barrel (Fig. 4).
- Each reload will give you 25 shots.
- Your Blaster can rapid-fire by pressing the trigger repeatedly.

- When you are out of shots you will hear a "click" from your Blaster indicating that you need to reload.

NOTE: You can reload as many times as you wish in each game.

HITS

- Once your Blaster has been reset, your Target Unit can be hit.
- Each time the Target Unit is hit, the electronic display will flash and the "hit" sounds will be heard.
- On the 9th hit, a warning tone will alert the player that they can only be hit one more time.
- On the 10th hit, the player is eliminated and the Blaster will shut down.

NEUTRALIZER

- To Neutralize your opponent, press the Neutralizer button and aim towards an opponent (Fig. 5).
- This feature will disable your opponent's Blaster for 15 seconds.
- This can give you time to escape or prepare for an attack.

NOTE: You can only use your Neutralizer feature 1 time per game.



3D SPY CARD

Unlock secret content with augmented reality technology.

MINIMUM OPERATING SPECS

High Speed Internet Access and USB or built-in Web Camera (640x480 or 320x240)

PC

- IE 6. or Firefox 2.0
- Windows Vista/XP
- 1 GB Ram
- Pentium 4 Processor
- Audio Card for Sound

MAC

- Safari 2.0
- Tiger or later (Leopard/Snow Leopard)
- 1 GB Ram

TO USE YOUR 3D SPY CARDS

- 1) Click on the 3D Cards tab on the SpyNet™ HQ Website (www.SpyNetHQ.com).
- 2) On the 3D Cards page, select your card's toy icon from the list.
- 3) After the page loads, you should see the camera view from your webcam onscreen.
- 4) Hold your 3D Spy Card up about 6-12 inches (15-30 centimeters) from your webcam, making sure that the entire face of the card can be seen onscreen.
- 5) You'll then see a 3D model of your toy appear onscreen. Cover the **R** button with your finger to have information windows about the toy pop up onscreen. Cover the **C** button with your finger to cycle to another 3D toy model.



HOLD 3D SPY CARD APPROXIMATELY ~ 6-12 INCHES/15-30 CENTIMETERS FROM WEBCAM

FOR SET-UP: (ADULT INSTALLATION REQUIRED)

Requires 6 AAA (LR03) alkaline battery (not included)

Battery installation:

- Each Target Unit requires 3 AAA (LR03) alkaline batteries.
- NOTE: No batteries are required for the Blaster.
- NOTE: SpyNet Laser Strike™ equipment works best with new batteries.

Locate the battery compartment underneath the unit. Using a Phillips screwdriver, remove the screw and the battery door. Install a fresh battery, matching polarity icons with those on the unit. Replace the battery compartment and the screw.

When operating in environments that are subject to electrostatic discharges, the SpyNet Laser Strike™ may malfunction. If this occurs, the user should reset the unit by using the on/off switch.

- Put on your target by sliding your arm through the strap, and adjust the strap to fit your arm (Fig. 1).

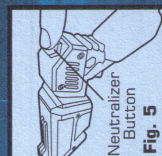 
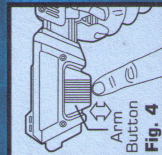 
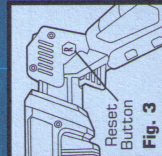 
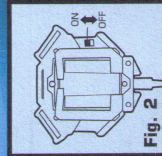 
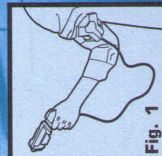 


Fig. 1

Fig. 2

Fig. 3

Fig. 4

Fig. 5