





MODEL: 12216698N Halloween Mini Strobe Light

Before using this product, read, understand, and follow these instructions. Save these instructions for future reference.


FOR HOUSEHOLD USE ONLY

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Always purchase the correct size and grade of battery most suitable for intended use.
 2) Do not mix old & new batteries, alkaline, standard (Carbon-zinc) or rechargeable (Nickel-cadmium) batteries.
 3) Clean the battery contacts and also those of the device prior to battery installation.
 4) Ensure the batteries are installed correctly with the regard to polarity (* and -):
 5) Always remove batteries if consumed or if product is to be left unused for a long time.

How to use:

- 1) Push ON switch to turn on the strobe light.
- 2) Turn left and right to control the flashing speed.
- 3) Push OFF switch to turn off the strobe light.

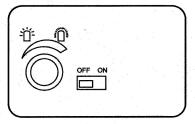

Specification:

 
- ON / OFF switch.
- Low / High flashing speed selection.
- DC 6V rate voltage.

 
WARNING:

- Do not look into the strobe light directly to avoid eye injury.
- This item is not a toy. For adult use only.
- To reduce the risk of injury, user must read and understand instruction manual.

Instruction:

- 1. Remove the screw from the cover
- 2. Insert 4 "AA" batteries into battery compartment
- 3. Replace the cover and fasten the screw





1. Remove the screw from the cover

2. Insert 4 "AA" batteries according to the polarity indicated