




INSERTING THE BATTERIES:


Screw will remain attached to door. Insert 2 fresh "AA" or R6 size batteries. Alkaline batteries recommended. Replace door. Be sure to fully tighten the screw.

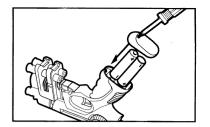


Using the Blaster:

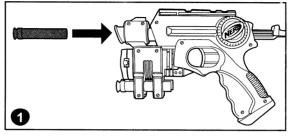

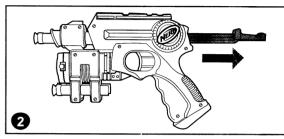

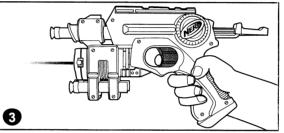

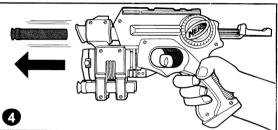

Pull trigger about halfway to see the light beam. This works best in low-light conditions.

IMPORTANT: BATTERY INFORMATION

$\hat{oldsymbol{ol}}}}}}}}}}}}}}}}}$

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



Product and colors may vary.
© 2009 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. No. 5529050.
61496801 P/N 6976530000



